

**A. Non-Calendar Watches:**

- 1) Pull the crown out.
- 2) Rotate the crown until the current time is displayed.
- 3) Push the crown in to commence timekeeping.

B. Date Calendar Watches:

- 1) Pull the crown out two clicks.
- 2) Advance the time to AM hours by rotating the crown until the date indicator advances once.
- 3) Set the current time as follows:
 - For AM hours advance the hands directly to the current time.
 - For PM hours advance the hour hand one full rotation (12 hours) *once*, prior to setting the time.
- 4) Push the crown in one click to its middle position.
- 5) Rotate the crown until the date indicator displays the correct value.
- 6) Push the crown in one click to commence timekeeping.

C. Multi-Calendar Watches (SIM3800 / SIM4800 series):*SIM3800 Series Watches:*

- 1) Pull the crown out.
- 2) Rotate the crown clockwise until the current time is displayed.
 - Reference the 24-hour sub dial to ensure am/pm hours are set accordingly (0-12=am, 12-24=pm).
- 3) Push the crown in to commence timekeeping.
- 4) Press the button above the crown until the day of the week sub dial displays the correct value.
- 5) Press the button below the crown until the date sub dial displays the correct value.

SIM4800 Series Watches:

- 1) Pull the crown out to clicks.
- 2) Rotate the crown clockwise until the day of the week indicator displays the correct value.
- 3) Rotate the crown clockwise until the current time is displayed.
 - Reference the 24-hour sub dial to ensure am/pm hours are set accordingly (0-12=am, 12-24=pm).
- 4) Push the crown in one click to its middle position.
- 5) Rotate the crown counterclockwise until the date indicator displays the correct value.
- 6) Push the crown in one click to commence timekeeping.

Water Resistance Guidelines

NOTE: Manipulation of the crown while the watch is in contact with water will negate the water resistance rating as water penetration may occur.

3 ATM - splash resistant only. Use care while hand washing, do not submerge. Not suitable for bathing, swimming, or for use in wet environments.

5 ATM - may be submerged for short durations, in normal temperature fresh water only. Not suitable for bathing, swimming, watersports, or diving.