

# The Elevon *Langley* Timepiece

(ELE103-1 – ELE103-6)



## Setting Instructions

- 1) Pull the crown out two clicks.
- 2) Set the current time by rotating the crown counterclockwise. Reference the 24-hour sub dial to ensure AM / PM hours are observed accordingly (60-30 = AM, 30-60 = PM).
- 3) Push the crown in one click.
- 4) Set the current date by rotating the crown counterclockwise until the correct value is displayed.
- 5) Push the crown in one click to commence timekeeping.

**Note:** Setting the time to AM / PM accordingly ensures that the date indicator changes at midnight rather than noon. If the date indicator has not changed by 4 AM, advance the hour hand one full rotation (12 hours), then reset the date indicator as necessary.

## Timer Start / Stop / Reset

- 1) Press Button A to start the timer, press again to pause.
- 2) Press Button B to reset the timer / hands.

## Timer Hand Adjustment

- 1) Pull the crown out two clicks.
- 2) Press button A to advance the timer seconds hand to the desired location.
- 3) Push the crown in two clicks.

**Note:** Pressing button A will advance the seconds hand one increment at a time. Pressing and holding button A will advance the hand at an accelerated rate. The minutes sub dial will reset automatically after the crown is pushed back in and the timer is activated then reset.

## Water Resistance Guidelines

**5 ATM** - may be submerged for short durations, in normal temperature fresh water only. Not suitable for bathing, swimming, watersports, or diving.

**Note:** Manipulation of the crown or buttons while the watch is in contact with water will negate the rated water resistance, as water penetration may occur.