

# The Elevon *Curtiss* Timepiece

(ELE104-1 – ELE104-6)



## Setting Instructions

- 1) Pull the crown out two clicks.
- 2) Set the current time by rotating the crown clockwise. Reference the 24-hour sub dial to ensure AM / PM hours are observed accordingly (24-12 = AM, 12 – 24 = PM).
- 3) Push the crown in one click.
- 4) Set the current date by rotating the crown clockwise until the correct value is displayed.
- 5) Push the crown in one click to commence timekeeping.

**Note:** Setting the time to AM / PM accordingly ensures that the date indicator changes at midnight rather than noon. If the date indicator is changing in the afternoon, advance the hour hand one full rotation (12 hours), then reset the date indicator as necessary.

## Timer Functions

### Start / Stop / Reset

- 1) Press Button A to start the timer, press again to stop.
- 2) Press Button B to reset the timer / hands.

### Lap Tracking

- 1) Press Button A to start the timer.
- 2) Press Button B to pause the timer hands (chronograph will continue running even though the hands are paused).
- 3) Press Button B to resume (timer hands will quickly advance to current elapsed time).
- 4) Repeat steps 1 – 3 for any successive laps.
- 5) To stop the timer, press Button A (chronograph and hands will stop), press again to resume.
- 6) To reset the timer, press Button A to stop, then press Button B to reset.

## Water Resistance Guidelines

**5 ATM** - may be submerged for short durations, in normal temperature fresh water only. Not suitable for bathing, swimming, watersports, or diving.

**Note:** Manipulation of the crown or buttons while the watch is in contact with water will negate the rated water resistance, as water penetration may occur.