


The Breed Tempest Timepiece

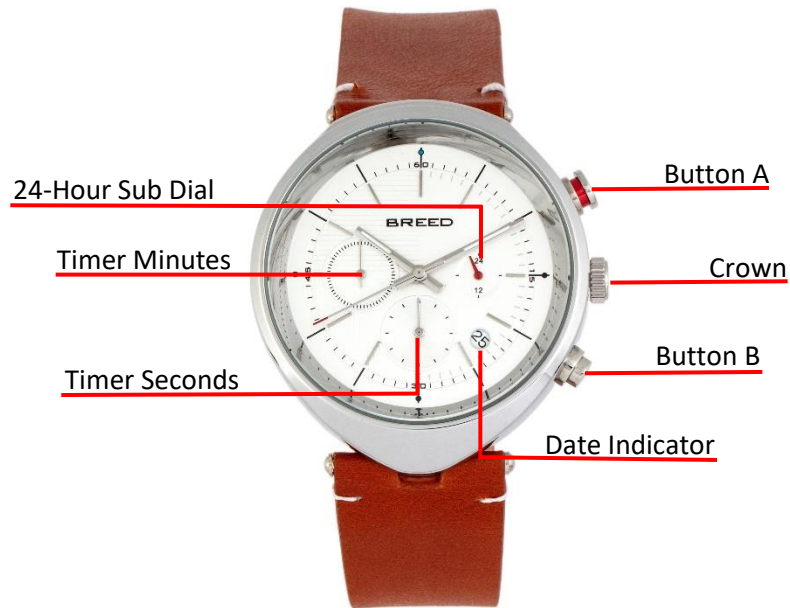

Setting Instructions

- 1) Pull the crown out two clicks.
- 2) Rotate the crown clockwise to set the current time. Observe the 24-hour sub dial to ensure that the watch is properly set to AM or PM (24-12 = AM, 12-24 = PM).
- 3) Push the crown in one click.
- 4) Set the current date by rotating the crown clockwise.
- 5) Push the crown in one click to commence timekeeping.

NOTE: Setting the time to AM / PM hours properly will ensure that the date indicator changes at midnight, rather than noon. If the date indicator has not changed to the current date by 4 AM, the time was likely set 12 hours off. To correct this, advance the time 12 hours (one full rotation of the hands), then adjust the date as necessary.

Timer

- 1) Press Button A to start the timer, press again to pause.
- 2) To reset, pause the timer then press Button B.

Timer Hands Adjustment

- 1) Ensure the timer is stopped and has been reset.
- 2) Pull the crown out two clicks.
- 3) Press Button A or B to move the hands to the desired location (Button A = clockwise, Button B = counterclockwise).
- 4) Once adjustment is complete, push the crown back in two clicks to commence timekeeping.

NOTE: Pressing Button A or B once will move the hands one increment, pressing and holding will move the hands at an accelerated rate.

Water Resistance Guidelines

5 ATM - May be submerged for short durations, in normal temperature fresh water only. Not suitable for bathing, swimming, watersports, or diving.

NOTE: Manipulation of the crown or buttons while in contact with water will negate the water resistance rating, as water penetration may occur.